




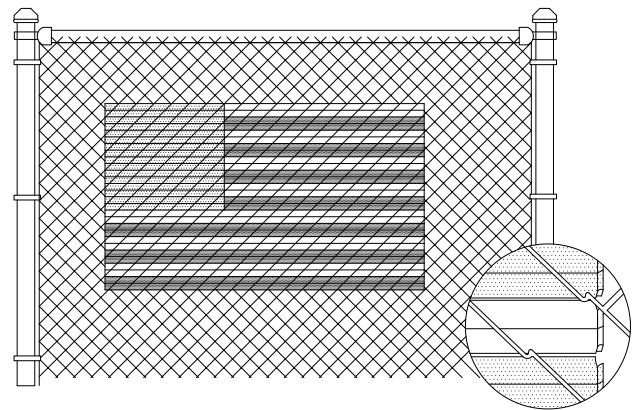

INSTALLATION INSTRUCTIONS

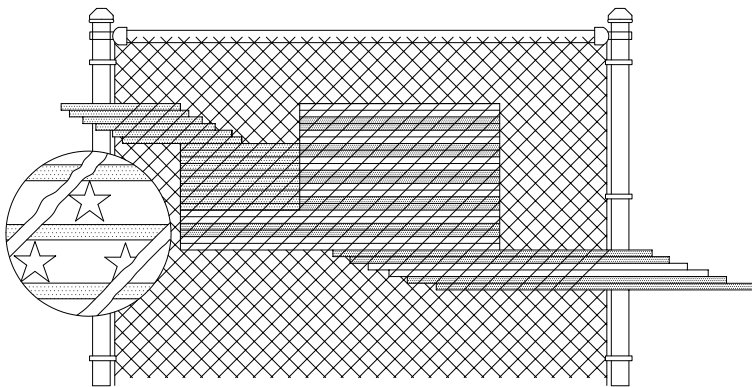


PROFILE:

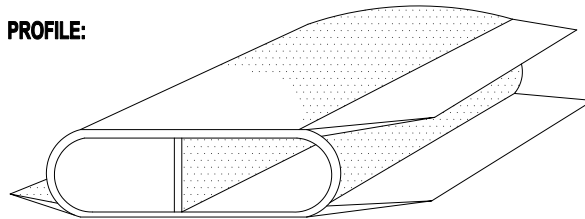

1. SLIDE THE BLUE SLATE HORIZONTALLY INTO THE WIRE FROM THE LEFT SIDE. MAKE SURE THE 'FLAT' END IS INSERTED INTO THE WIRE FIRST (THIS WILL ENSURE THAT THE BLUE, WHITE AND RED SLAT MATCH-UP SQUARELY).
2. SLIDE THE RED AND WHITE SLATS HORIZONTALLY INTO THE WIRE FROM THE RIGHT SIDE. ENSURE THAT THE 45.5" SLATS ARE USED AGAINST THE BLUE. MAKE SURE THE 'FLAT' END IS INSERTED INTO THE WIRE FIRST (THIS WILL ENSURE THAT THE BLUE, WHITE AND RED SLAT MATCH-UP SQUARELY).
3. SLIDE THE REMAINING (69.5") RED AND WHITE SLATS HORIZONTALLY INTO THE WIRE FROM THE RIGHT SIDE (THIS WILL ENSURE THAT THE BLUE, WHITE AND RED SLAT MATCH-UP SQUARELY).
4. APPLY THE WHITE STARS TO BLUE SECTION OF THE FENCE. THERE ARE SUFFICIENT STARS TO APPLY 50 TO EACH SIDE OF THE FENCE.

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWING.
3. THIS DRAWING IS INTENDED FOR USE BY ARCHITECTS, ENGINEERS, CONTRACTORS, CONSULTANTS AND DESIGN PROFESSIONALS FOR PLANNING PURPOSES ONLY. THIS DRAWING MAY NOT BE USED FOR CONSTRUCTION.
4. ALL INFORMATION CONTAINED HEREIN WAS CURRENT AT THE TIME OF DEVELOPMENT BUT MUST BE REVIEWED AND APPROVED BY THE PRODUCT MANUFACTURER TO BE CONSIDERED ACCURATE.
5. CONTRACTOR'S NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT www.CADdetails.com/info AND ENTER REFERENCE NUMBER 710-013

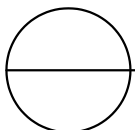

PDS® COMMERCIAL FENCE PRODUCTS

AMERICAN FLAG FENCE KIT