


PEXCO


INSTALLATION INSTRUCTIONS

STEP 1

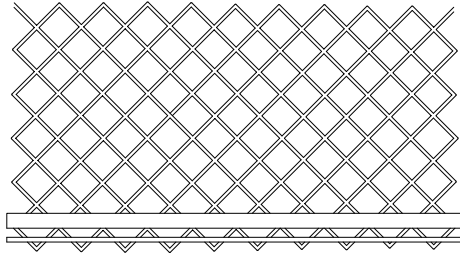


INSERT RAIL HORIZONTALLY IN FIRST FULL DIAMOND AT BOTTOM OF FENCE WITH OPEN SIDE FACING UP.

STEP 2

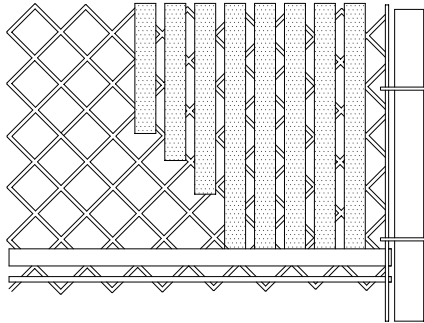


INSERT VERTICAL SLATS WITH BEVELED/NOTCHED END DOWNWARD. SLAT ENGAGES AND INTERLOCKS WITH BOTTOM RAIL.

STEP 3



PUSH THE VERTICAL SLAT INTO THE HORIZONTAL CHANNEL TO LOCK-IN PLACE.

COMPLETE

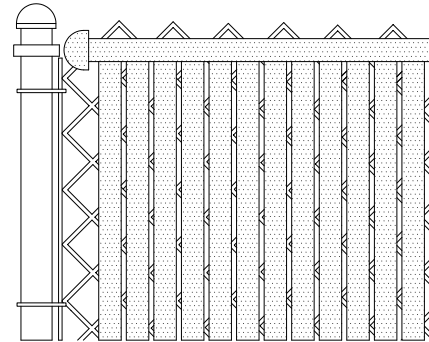


ENJOY A BEAUTIFUL FENCE THAT WAS SIMPLE TO INSTALL.

MANUFACTURERS' NOTE:

1. SPECIAL HEIGHTS AVAILABLE UPON REQUEST

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWING.
3. THIS DRAWING IS INTENDED FOR USE BY ARCHITECTS, ENGINEERS, CONTRACTORS, CONSULTANTS AND DESIGN PROFESSIONALS FOR PLANNING PURPOSES ONLY. THIS DRAWING MAY NOT BE USED FOR CONSTRUCTION.
4. ALL INFORMATION CONTAINED HEREIN WAS CURRENT AT THE TIME OF DEVELOPMENT BUT MUST BE REVIEWED AND APPROVED BY THE PRODUCT MANUFACTURER TO BE CONSIDERED ACCURATE.
5. CONTRACTOR'S NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT www.CADdetails.com/info AND ENTER REFERENCE NUMBER 710-001

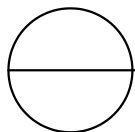

PDS® COMMERCIAL FENCE PRODUCTS

BOTTOM LOCK PRIVACY FENCE SLATS