






INSTALLATION INSTRUCTIONS

STEP 1

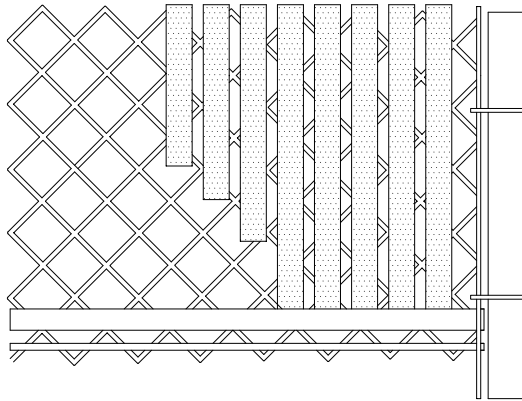

THERE IS NO NEED TO KNEEL DOWN! SIMPLY INSERT THE SLATS VERTICALLY FROM TOP TO BOTTOM, KEEPING THE LOCKING HOLES ON TOP.

STEP 2

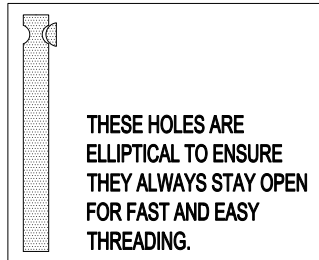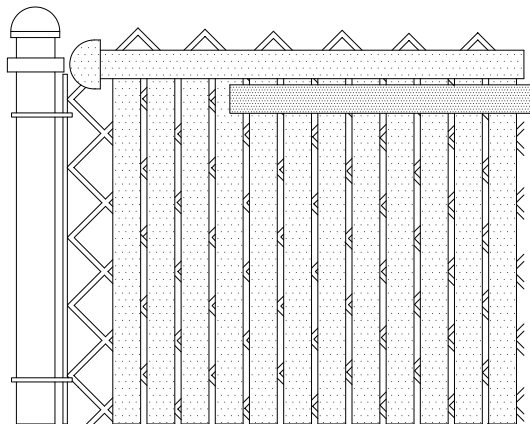


THREAD THE FLEXIBLE LOCKING CHANNEL HORIZONTALLY THROUGH THE NOTCHED HOLES IN THE SLATS.

MANUFACTURERS' NOTE:

1. SPECIAL HEIGHTS AVAILABLE UPON REQUEST

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWING.
3. THIS DRAWING IS INTENDED FOR USE BY ARCHITECTS, ENGINEERS, CONTRACTORS, CONSULTANTS AND DESIGN PROFESSIONALS FOR PLANNING PURPOSES ONLY. THIS DRAWING MAY NOT BE USED FOR CONSTRUCTION.
4. ALL INFORMATION CONTAINED HEREIN WAS CURRENT AT THE TIME OF DEVELOPMENT BUT MUST BE REVIEWED AND APPROVED BY THE PRODUCT MANUFACTURER TO BE CONSIDERED ACCURATE.
5. CONTRACTOR'S NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT www.CADdetails.com/info AND ENTER REFERENCE NUMBER 710-002

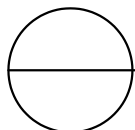

PDS® COMMERCIAL FENCE PRODUCTS

TOP LOCK FENCE SLATS