


PEXCO


INSTALLATION INSTRUCTIONS

STEP 1

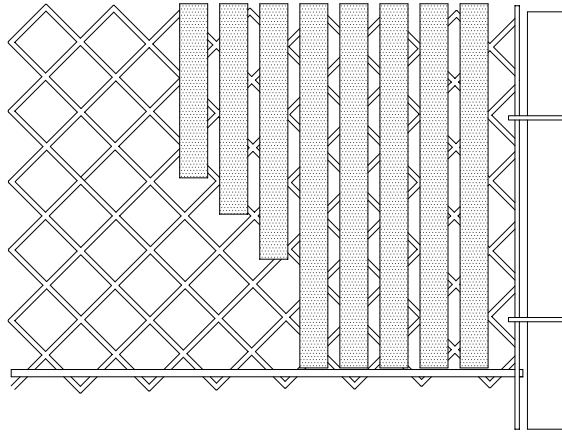

INSERT VERTICAL SLATS WITH ANGLE CUT END DOWNWARD. WINGED PORTION INTERLOCKS WITH CHAIN LINK KNUCKLES.

COMPLETE

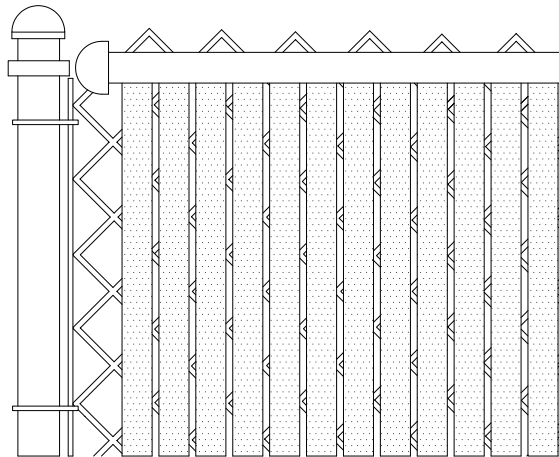


ENJOY A BEAUTIFUL FENCE THAT WAS SIMPLE TO INSTALL.

MANUFACTURERS' NOTE:

1. SPECIAL HEIGHTS AVAILABLE UPON REQUEST

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWING.
3. THIS DRAWING IS INTENDED FOR USE BY ARCHITECTS, ENGINEERS, CONTRACTORS, CONSULTANTS AND DESIGN PROFESSIONALS FOR PLANNING PURPOSES ONLY. THIS DRAWING MAY NOT BE USED FOR CONSTRUCTION.
4. ALL INFORMATION CONTAINED HEREIN WAS CURRENT AT THE TIME OF DEVELOPMENT BUT MUST BE REVIEWED AND APPROVED BY THE PRODUCT MANUFACTURER TO BE CONSIDERED ACCURATE.
5. CONTRACTOR'S NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT www.CADdetails.com/info AND ENTER REFERENCE NUMBER 710-005

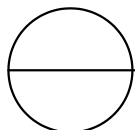

PDS® COMMERCIAL FENCE PRODUCTS

WINGED SLAT® (EXTRA PRIVACY)