




INSTALLATION INSTRUCTIONS


REQUIRES NO LOCKING DEVICE OR TOOLS. HEDGELINK
INSTALLS MUCH LIKE OUR CLASSIC BOTTOM-LOCKING OR
TOP-LOCKING SLATS - INSTALLING VERTICALLY FROM TOP
TO BOTTOM.

STEP 1

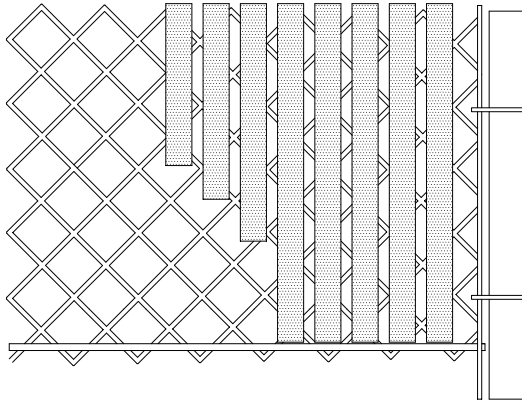

INSERT VERTICAL SLATS WITH ANGLE CUT END
DOWNWARD. WINGED PORTION INTERLOCKS WITH CHAIN
LINK KNUCKLES.

COMPLETE

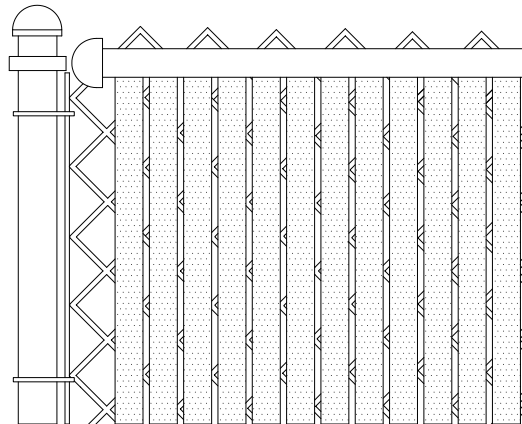


ENJOY A BEAUTIFUL FENCE THAT WAS SIMPLE TO
INSTALL.

MANUFACTURERS' NOTE:

1. SPECIAL HEIGHTS AVAILABLE UPON REQUEST

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWING.
3. THIS DRAWING IS INTENDED FOR USE BY ARCHITECTS, ENGINEERS, CONTRACTORS, CONSULTANTS AND DESIGN PROFESSIONALS FOR PLANNING PURPOSES ONLY. THIS DRAWING MAY NOT BE USED FOR CONSTRUCTION.
4. ALL INFORMATION CONTAINED HEREIN WAS CURRENT AT THE TIME OF DEVELOPMENT BUT MUST BE REVIEWED AND APPROVED BY THE PRODUCT MANUFACTURER TO BE CONSIDERED ACCURATE.
5. CONTRACTOR'S NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT www.CADdetails.com/info AND ENTER REFERENCE NUMBER 710-010

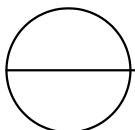

PDS® COMMERCIAL FENCE PRODUCTS

HEDGELINK® FENCE SLATS